 




The PT1232, part of our compact line of cable extension transducers, delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT1232 sends a raw 16-bit position count from 0000 to FFFF (hex). Additionally this device can be set to continuously send data or send data only when polled.

As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

Output Signal



PT1232

Cable Actuated Sensor Industrial Grade • RS232

Absolute Linear Position to 50 inches (1270 mm)

Aluminum and Polycarbonate Enclosure

Compact Design

IP65 • NEMA 4 Protection

General

Full Stroke Range

0-2 to 0-50 inches

Options

Format Hex

Accuracy ± 0.25 to 0.10% full stroke (see ordering information)

Repeatability ± 0.02% full stroke

Resolution ± 0.003% full stroke

Measuring Cable 0.019-in. dia. nylon-coated stainless steel

Enclosure glass-filled polycarbonate and anodized aluminum

Sensor plastic-hybrid precision potentiometer

Potentiometer Cycle

Life

see ordering information

Maximum Retraction

Acceleration

see ordering information

Weight 1 lb. max.

Electrical

Input Voltage 9...22 VDC

Input Current 40 mA

Baud Rate 9600 (selectable to 38.4K)

Update Rate 32 msec

Environmental

Enclosure NEMA 4, IP 65

 
Operating Temperature 0° to 185°F (-17° to 85°C)

Vibration up to 10 g to 2000 Hz maximum

SENSOR SOLUTIONS /// PT1232 12//2015 Page 1

I/O Format





Data Frame

6 byte Hex string:

STX	CMD	B ₀	В ₁	B ₂	ETX	
STX = 0x02	CMD = Co	mmand Code	* B ₀ - B ₂ =	Data Field*	ETX = 0x03	3

* –see below

Important! All communications to/from the transducer are in HEX!

User Commands:

	User Command				Sensor Response			
Description	<cmd></cmd>	<b<sub>0></b<sub>	<b<sub>1></b<sub>	<b<sub>2></b<sub>	<cmd></cmd>	<b<sub>0></b<sub>	<b<sub>1></b<sub>	<b<sub>2></b<sub>
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version ⁽⁴⁾	date ⁽⁵⁾	date ⁽⁵⁾
Get Serial Number	0x15	0x00	0x00	0x00	0x15	serial number ⁽³⁾		
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	$CMC^{(1)}$	$CMC^{(1)}$	status ⁽²⁾

(1)CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes (B_0 and B_1) of the data field. B_0 is the MSB (most significant byte) and B_1 is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

(2)Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows:

0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

(3)Serial Number

Each sensor has it's own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

(4)Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

⁽⁵⁾Date

This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 - 12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

Example: 08054 = August 5, 2004


Baud Rate

The baud rate can be set using switches 7 & 8 on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.


DIP-7	DIP-8	baud rate				
0	0	9600				
1	0	19200				
0	1	38400				
1	1	9600				




RS232 Controller Board and DIP Switch Location

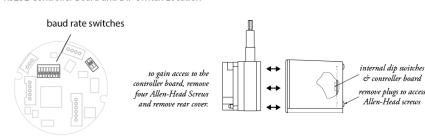

Outline Drawing

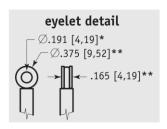

Range	Α				
2, 10	1.04 [26,4]				
5, 25, 50	0.58 [14,7]				
15, 30	0.82 [20,8]				
20, 40	0.74 [18,8]				
	inches [mm]				

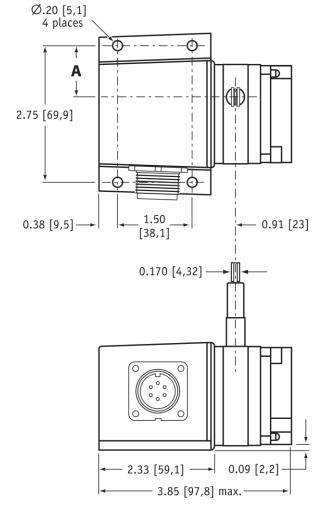

* tolerance = +.005 -.001 [+.13 -.03] ** tolerance = +.005 -.005 [+.13 -.13]

	. /	,— see detail
<u>†</u>	<u> </u>	── Ø.38 [9,7]
1.50 ± .13	lil.	
[38,2 ± 3,2]	 	G == f= .1
<u> </u>		—— Ø.37 [9,4]
†	0	
1.98 [50,2] 	:	
<u> </u>		1.19 [30,2]
0.19	— 3.25 [i	82,6]

DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

Ordering Information

Model Number:

Sample Model Number:

PT1232 - 50 - UP - M6 - SG

range:

50 inches

measuring cable exit:

up (top exit)

electrical connection:

6-pin plastic connector


G cable guide

spring loaded


Full Stroke Range:

order code:	2	5	10	15	20	25	30	40	50	
full stroke range, min:	2 in.	5 in.	10 in.	15 in.	20 in.	25 in.	30 in.	40 in.	50 in.	
accuracy (% of f.s.):	0.2	5%		0.1	.5%			0.10%		
potentiometer cycle life:	fe: 2,500,000 cycles		500,000 cycles				250,000 cycles			
cable tension (20%):	12 oz.	5 oz.	12 oz.	9 oz.	6 oz.	5 oz.	9 oz.	6 oz.	5 oz.	
max. cable acceleration:	11 g	3 g	11 g	5 g	4 g	3 g	5 g	4 g	3 g	


Cable Exit:

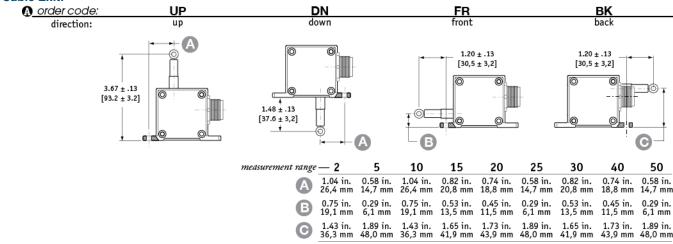

Electrical Connection:

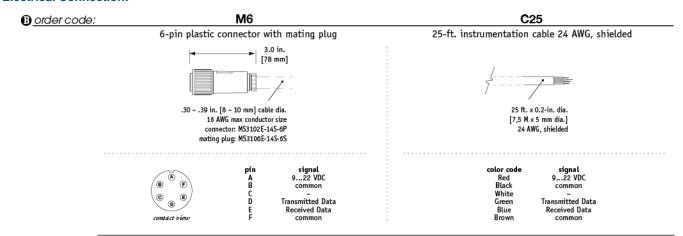

Cable Guide:

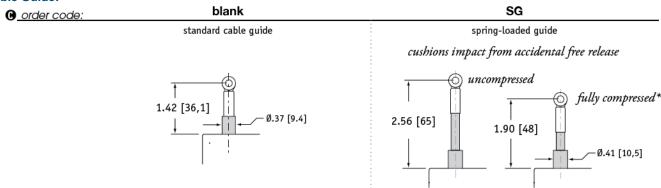

*note: start of full stroke range begins at full compression point (except 2-inch and 5-inch ranges).



19 Waterman Ave.Toronto,Ont. M4B1Y2
Tel:416-445-5500 Fax: 416-445-1170
Toll Free: 1-800-465-1600
Email: sales@intertechnology.com
Website: www.intertechnology.com

TE.com/sensorsolutions

Measurement Specialties, Inc., a TE Connectivity company.

Measurement Specialties, TE Connectivity, TE Connectivity (logo) and EVERY CONNECTION COUNTS are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2015 TE Connectivity Ltd. family of companies All Rights Reserved.

PT1232 12/01/2015