






## FREQUENTLY ORDERED ACCESSORIES



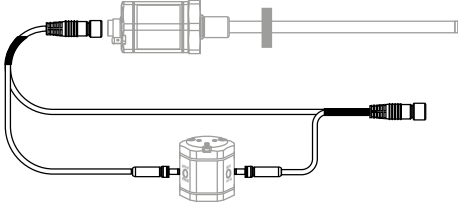
### Adapter cables for connection of TempoLink® smart assistant to a specific R-Series V-sensor

			
<b>Adapter cable for D56</b> M8 female connector (4 pin) – barrel Part no. 254 887-1	<b>Adapter cable for D34/D58</b> M12 female connector (5 pin/4 pin) – barrel Part no. 254 897-1	<b>Adapter cable for D60</b> M16 female connector (6 pin) – barrel Part no. 254 989-1	<b>Adapter cable for D70</b> M16 female connector (7 pin) – barrel Part no. 254 990-1
Material: PVC Cable length: 1.5 m For connection type: D56 (EtherCAT®/EtherNet/IP™/POWERLINK/ PROFINET)	Material: PUR Cable length: 1.5 m For connection type: D34/D58 (Analog/EtherCAT®/EtherNet/IP™/ POWERLINK/PROFINET)	Material: PVC Cable length: 1.5 m For connection type: D60 (Analog)	Material: PVC Cable length: 1.5 m For connection type: D70 (SSI)

### Adapter cable

	
<b>Adapter cable for D84</b> M12 female connector (8 pin) – barrel Part no. 255 204-1	<b>Adapter cable for cable output</b> 6 × terminal clamps – barrel Part no. 255 043-1
Material: PUR Cable length: 1.5 m For connection type: D84 (SSI)	Material: PVC Cable length: 1.5 m For connection type: Cable outlet (Analog/SSI)

### Inline cables

		
<b>Inline cable for cable outlet (SSI)</b> 6 × terminal clamps – pigtail with 2 barrel connectors Part no. 255 004	<b>Inline cable for D70</b> M16 female connector (7 pin) – M16 connector male (7 pin) with 2 barrel connectors Part no. 254 994-1	<b>Inline cable</b>
Material: PVC Cable length: 1.5 m For connection type: Cable outlet (SSI)	Material: PVC Cable length: 1.5 m For connection type: D70 (SSI)	<ul style="list-style-type: none"> <li>• The TempoLink® smart assistant can be used to read out R-Series V status information during operation.</li> <li>• SSI combines power supply and data lines in one cable.</li> <li>• Inline cable allows the TempoLink® smart assistant to be connected in parallel to the data transfer to the control. So status information can be read during operation of the R-Series V SSI sensor while the TempoLink® smart assistant is connected.</li> </ul>

## ORDER CODE

1	2	3	4	5	6	7	8
T	L		0				
a		b	c	d			

a	Type
T L	TempoLink® smart assistant kit

b	Power supply
1	Plug-in power supply with plug adapters (AU, CCC, EU, UK, US)
2	Cable for insertion in existing sensor power supply with sensor mating connector and barrel connector (for connection type D56)
3	Cable for insertion in existing sensor power supply with sensor mating connector and barrel connector (for connection type D58)
4	Barrel connector with pig-tail for connection to an existing power supply

c	Option
0	No options

d	Adapter cables for connection to R-Series V
E M 0 8	Cable with M8 female connector (4 pin) for connection type D56 (EtherCAT®/EtherNet/IP™/POWERLINK/PROFINET) (part no. 254 887-1)
E M 1 2	Cable with M12 female connector (4 pin) for connection type D58 (EtherCAT®/EtherNet/IP™/POWERLINK/PROFINET) (part no. 254 897-1)
S D 7 0	Cable with M16 female connector (7 pin) for connection type D70 (SSI) (part no. 254 990-1)
S D 8 4	Cable with M12 female connector (8 pin) for connection type D84 (SSI) (part no. 255 204-1)
A D 3 4	Cable with M12 female connector (5 pin) for connection type D34 (Analog) (part no. 254 897-1)
A D 6 0	Cable with M16 female connector (6 pin) for connection type D60 (Analog) (part no. 254 989-1)
A S 0 0	Cable with 6 × terminal clamps for connection type cable outlet (Analog/SSI) (part no. 255 043-1)

## DELIVERY



- TempoLink® smart assistant kit** Adapter cables to connect TempoLink® smart assistant to sensors of R-Series V can be ordered separately
- TempoLink® smart assistant
  - One of the four options for the power supply
  - One adapter cable to connect TempoLink® smart assistant to R-Series V sensor
  - USB cable for optional connection of TempoLink® smart assistant to a computer