


Programming Keypad

LCD Loader

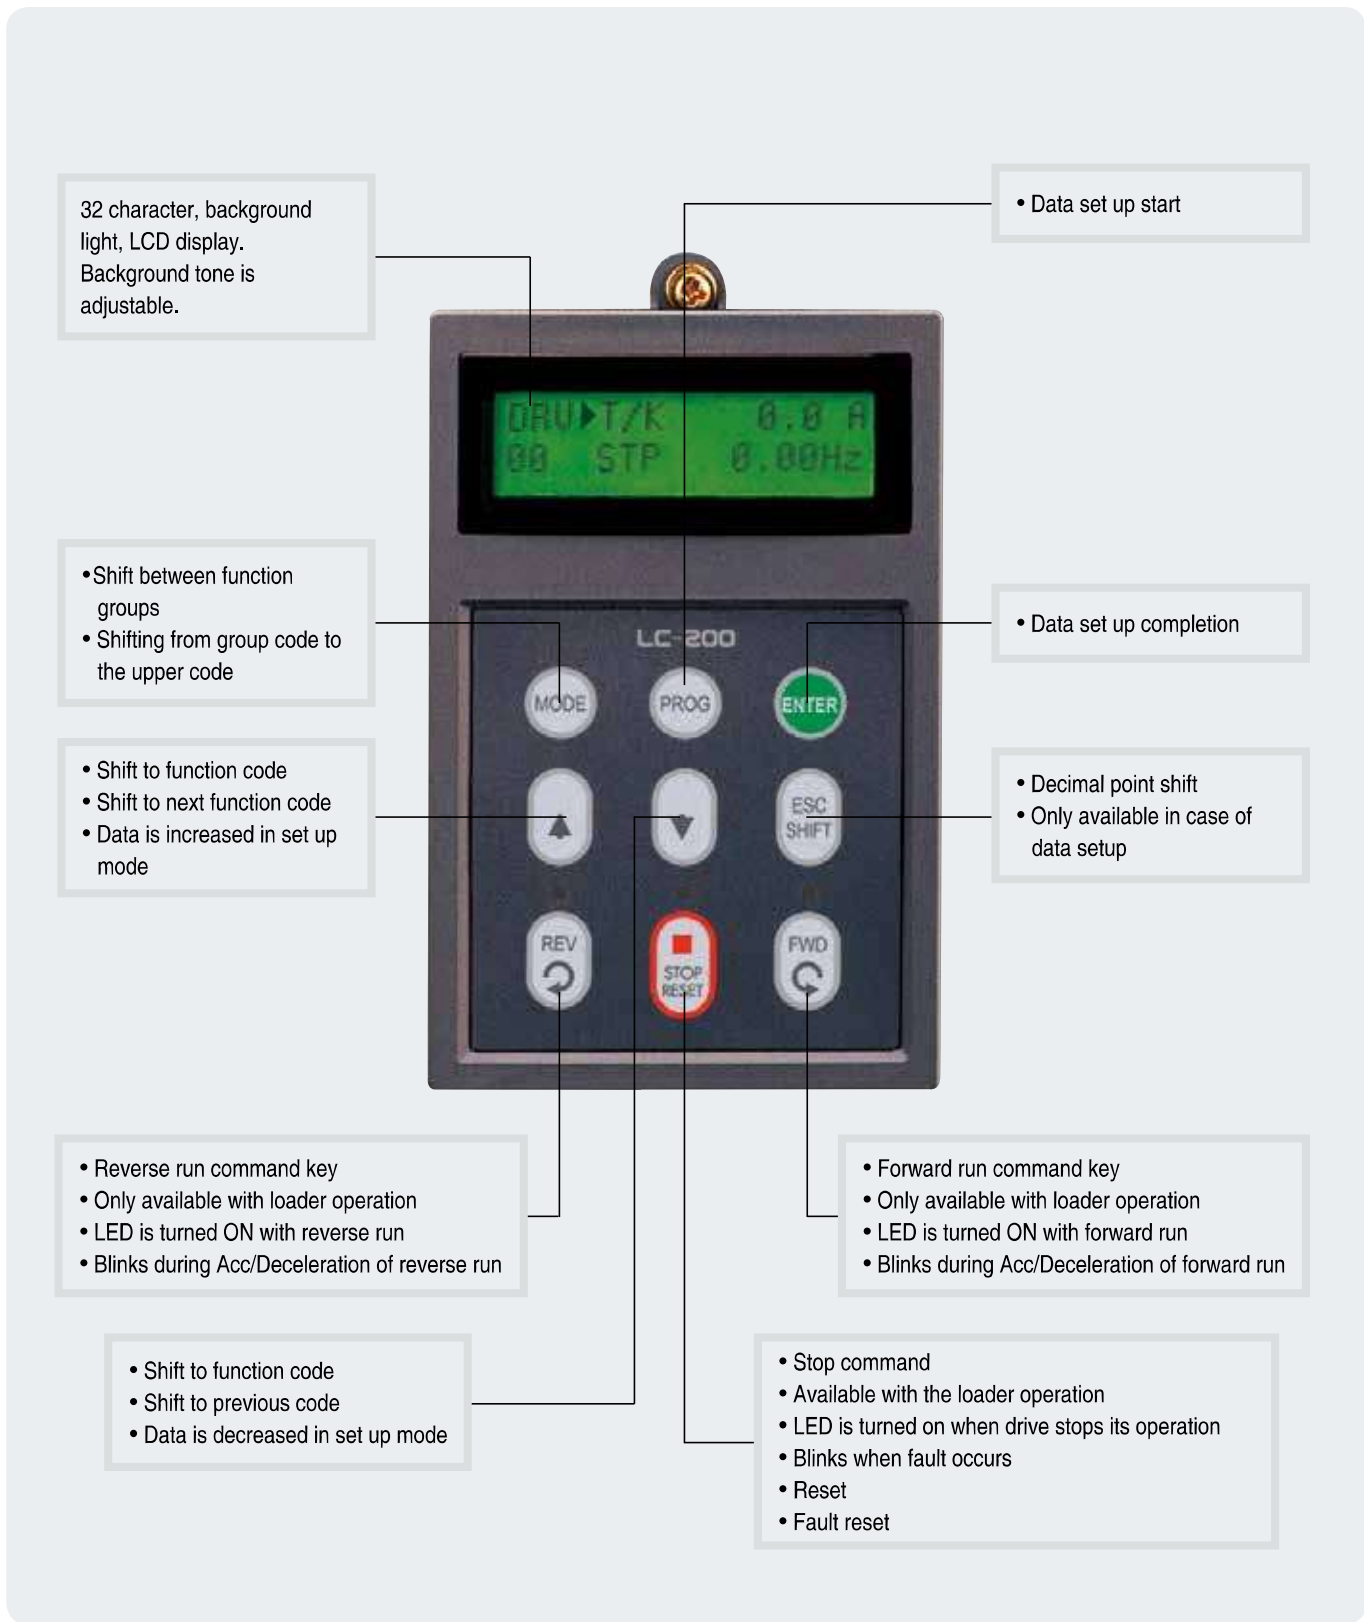

Programming Keypad (Parameter Navigation)

■ ■ Parameter group moves directly to DRV group by pressing [SHIFT] key in any parameter code.

