SIEMENS

Data sheet 3RS7000-1CE00



Separation amplifier 24 V AC/DC, 3-way separation input: 0-10 V output: 0-20 mA screw terminal

product brand name	SIRIUS
product category	Signal converter
product designation	Single-range converters
design of the product	active
product type designation	3RS70
General technical data	
display version LED	Yes
number of channels	1
consumed active power	0.29 W
insulation voltage for overvoltage category III according to IEC 60664 with degree of pollution 3 rated value	50 V
surge voltage resistance rated value	2 500 V
protection class IP	IP20
shock resistance according to IEC 60068-2-27	sinusoidal half-wave 15g / 11 ms
reference code according to IEC 81346-2	Т
Substance Prohibitance (Date)	03/25/2015
Supply voltage	
supply voltage at AC	
at 50 Hz rated value	24 V
at 60 Hz rated value	24 V
supply voltage at DC rated value	24 V
supply voltage frequency rated value	60 50 Hz
operating range factor supply voltage rated value	
• at AC at 50 Hz	0.8 1.1
• at AC at 60 Hz	0.8 1.1
• at DC	0.8 1.1
Precision	
relative metering precision	0.1 %
relative linearity deviation	0.05 %
temperature drift per °C	0.015 %/°C
voltage ripple maximum	20 mV
limit frequency	30 Hz
settling time for 1 % deviation	17 ms
rise time	6 ms
Main circuit	
type of voltage	AC/DC
Inputs/ Outputs	
input voltage	30 V
property of the output short-circuit proof	Yes
type of signal at input	0 10 V

tune of signal at authorit	0 20 mA
type of signal at output	330 kΩ
input impedance of voltage input minimum	220 KIZ
output load	F00 O
at the current output maximum	500 Ω
Electromagnetic compatibility	5 : 10
EMC emitted interference according to IEC 60947-1	Environment B
EMC immunity according to IEC 60947-1	corresponds to degree of severity 3
conducted interference	411/15/50
due to burst according to IEC 61000-4-4	1 kV 5/50 ns
 due to conductor-conductor surge according to IEC 61000-4-5 	1 kV
field-based interference according to IEC 61000-4-3	10 V/m
electrostatic discharge according to IEC 61000-4-2	6 kV contact discharge / 8 kV air discharge
Galvanic isolation	
design of the electrical isolation	3 paths
galvanic isolation	
between input and output	Yes
between the outputs	No
between the inputs	No
between the voltage supply and other circuits	Yes
Connections/ Terminals	
type of electrical connection	screw-type terminals
type of electrical conflection	
solid	1x (0.25 2.5 mm²)
finely stranded with core end processing	1x (0.25 1.5 mm²)
• for AWG cables solid	1 x (20 14)
connectable conductor cross-section	- · · · · · · · · · · · · · · · · · · ·
• solid	0.25 2.5 mm²
finely stranded with core end processing	0.25 1.5 mm²
AWG number as coded connectable conductor cross	0.20 1.0
section	
• solid	20 14
solid tightening torque with screw-type terminals	20 14 0.5 0.6 N·m
tightening torque with screw-type terminals	
tightening torque with screw-type terminals Installation/ mounting/ dimensions	0.5 0.6 N·m
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position	0.5 0.6 N·m any
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method	0.5 0.6 N·m any snap-on mounting
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height	0.5 0.6 N·m any snap-on mounting 93 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width	0.5 0.6 N⋅m any snap-on mounting 93 mm 6.2 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting	any snap-on mounting 93 mm 6.2 mm 72.5 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards	any snap-on mounting 93 mm 6.2 mm 72.5 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards	any snap-on mounting 93 mm 6.2 mm 72.5 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — at the side	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — upwards — at the side • for grounded parts — forwards — backwards — upwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — at the side • to grounded parts — forwards — backwards — upwards — at the side • at the side — backwards — upwards — at the side	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — at the side - backwards — at the side — downwards — at the side — downwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts	any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — forwards — observations — in the side — downwards • for live parts — forwards	any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — forwards — of the side — downwards • for live parts — forwards — backwards • for live parts — forwards — backwards	any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards — at the side — downwards • for live parts — forwards — backwards — upwards • for live parts — forwards — backwards — upwards	any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — obackwards — upwards — at the side — downwards — at the side — downwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards — backwards — backwards — backwards — backwards — backwards — downwards	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — downwards — backwards — upwards — backwards — upwards — downwards — at the side	0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm
tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — torwards — backwards — of orwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — backwards — upwards — hackwards — upwards — backwards — upwards — at the side — downwards — at the side Ambient conditions	any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm

during operation
 during storage
 during transport
 during transport
 melative humidity during operation
 during transport
 melative humidity during operation

Approvals Certificates

General Product Approval







Confirmation





Test Certificates

Marine / Shipping

other

Type Test Certificates/Test Report



Confirmation

Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RS7000-1CE00

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RS7000-1CE00

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)


https://support.industry.siemens.com/cs/ww/en/ps/3RS7000-1CE00

 $Image\ database\ (product\ images,\ 2D\ dimension\ drawings,\ 3D\ models,\ device\ circuit\ diagrams,\ EPLAN\ macros,\ ...)$

http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RS7000-1CE00&lang=en

Characteristic: Derating

https://support.industry.siemens.com/cs/ww/en/ps/3RS7000-1CE00/manual

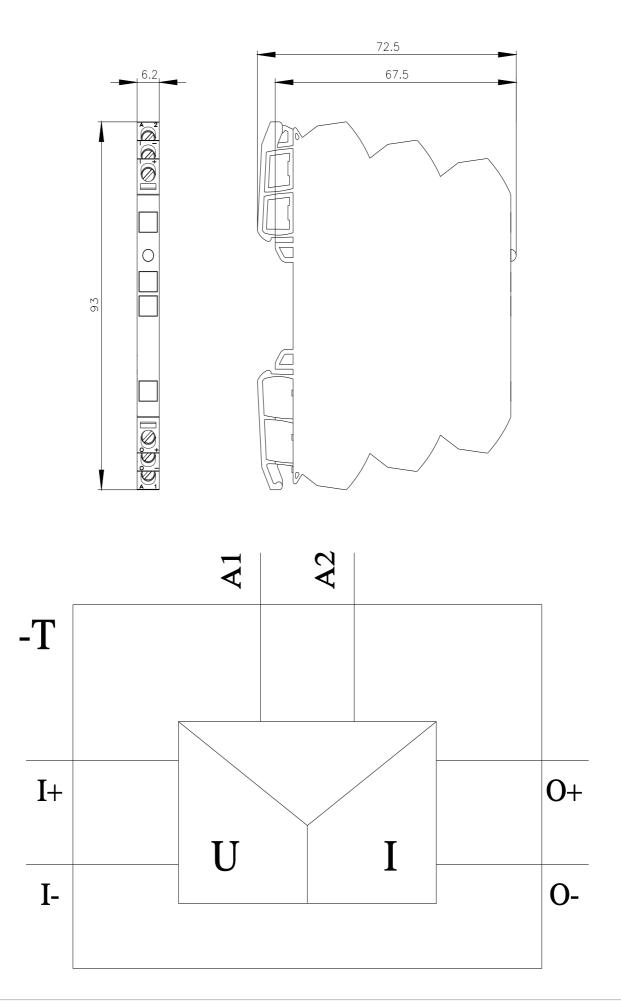

last modified: 12/23/2020 🖸

3RS7 Page	CE00)