SIEMENS

Data sheet 3RS7000-1DE00



Separation amplifier 24 V AC/DC, 3-way separation input: 0-10 V output: 4-20 mA screw terminal

| product brand name | SIRIUS | | | |
|---|----------------------------------|--|--|--|
| product category | Signal converter | | | |
| product designation | Single-range converters | | | |
| design of the product | active | | | |
| product type designation | 3RS70 | | | |
| General technical data | | | | |
| display version LED | Yes | | | |
| number of channels | 1 | | | |
| consumed active power | 0.29 W | | | |
| insulation voltage for overvoltage category III according to IEC 60664 with degree of pollution 3 rated value | 50 V | | | |
| surge voltage resistance rated value | 2 500 V | | | |
| protection class IP | IP20 | | | |
| shock resistance according to IEC 60068-2-27 | sinusoidal half-wave 15g / 11 ms | | | |
| reference code according to IEC 81346-2 | Т | | | |
| Substance Prohibitance (Date) | 03/25/2015 | | | |
| Supply voltage | | | | |
| supply voltage at AC | | | | |
| • at 50 Hz rated value | 24 V | | | |
| at 60 Hz rated value | 24 V | | | |
| supply voltage at DC rated value | 24 V | | | |
| supply voltage frequency rated value | 60 50 Hz | | | |
| operating range factor supply voltage rated value | | | | |
| • at AC at 50 Hz | 0.8 1.1 | | | |
| • at AC at 60 Hz | 0.8 1.1 | | | |
| • at DC | 0.8 1.1 | | | |
| Precision | | | | |
| relative metering precision | 0.1 % | | | |
| relative linearity deviation | 0.05 % | | | |
| temperature drift per °C | 0.015 %/°C | | | |
| voltage ripple maximum | 20 mV | | | |
| limit frequency | 30 Hz | | | |
| settling time for 1 % deviation | 17 ms | | | |
| rise time | 6 ms | | | |
| Main circuit | | | | |
| type of voltage | AC/DC | | | |
| Inputs/ Outputs | | | | |
| input voltage | 30 V | | | |
| property of the output short-circuit proof | Yes | | | |
| type of signal at input | 0 10 V | | | |
| | | | | |

| type of signal at output | 4 20 mA |
|--|--|
| input impedance of voltage input minimum | 330 kΩ |
| output load | |
| at the current output maximum | 500 Ω |
| Electromagnetic compatibility | |
| EMC emitted interference according to IEC 60947-1 | Environment B |
| EMC immunity according to IEC 60947-1 | corresponds to degree of severity 3 |
| conducted interference | |
| due to burst according to IEC 61000-4-4 | 1 kV 5/50 ns |
| due to conductor-conductor surge according to IEC | 1 kV |
| 61000-4-5 | |
| field-based interference according to IEC 61000-4-3 | 10 V/m |
| electrostatic discharge according to IEC 61000-4-2 | 6 kV contact discharge / 8 kV air discharge |
| Galvanic isolation | |
| design of the electrical isolation | 3 paths |
| galvanic isolation | |
| between input and output | Yes |
| between the outputs | No |
| between the inputs | No |
| between the voltage supply and other circuits | Yes |
| Connections/ Terminals | |
| type of electrical connection | screw-type terminals |
| type of connectable conductor cross-sections | 1v /0.25 |
| solid finally stranged with care and processing | 1x (0.25 2.5 mm²) |
| finely stranded with core end processing for AWC cables calld | 1x (0.25 1.5 mm²) |
| • for AWG cables solid | 1 x (20 14) |
| connectable conductor cross-section | 0.25 2.5 mm² |
| solid finally stranged with earn and processing | 0.25 1.5 mm² |
| finely stranded with core end processing AWG number as coded connectable conductor cross | 0.25 1.5 |
| section | |
| | |
| • solid | 20 14 |
| solid tightening torque with screw-type terminals | 20 14 0.5 0.6 N·m |
| | |
| tightening torque with screw-type terminals | |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions | 0.5 0.6 N·m |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position | 0.5 0.6 N·m any |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method | 0.5 0.6 N·m any snap-on mounting |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth | 0.5 0.6 N·m any snap-on mounting 93 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards | any snap-on mounting 93 mm 6.2 mm 72.5 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side | any snap-on mounting 93 mm 6.2 mm 72.5 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — backwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — a the side • for grounded parts — forwards — backwards — upwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — backwards — backwards — upwards — at the side | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side - torwards — backwards — upwards — at the side — downwards — at the side — downwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts | any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — backwards — in the side — downwards • for live parts — forwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards • for live parts — forwards — backwards — upwards | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — backwards — upwards — backwards — upwards — backwards — upwards — downwards | any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — downwards — backwards — upwards — downwards — downwards — at the side | 0.5 0.6 N·m any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — backwards — observates — torwards — backwards — upwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — downwards — backwards — upwards — downwards — backwards — upwards — backwards — upwards — at the side Ambient conditions | any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |
| tightening torque with screw-type terminals Installation/ mounting/ dimensions mounting position fastening method height width depth required spacing • with side-by-side mounting — forwards — backwards — upwards — downwards — at the side • for grounded parts — forwards — backwards — upwards — at the side • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — downwards — backwards — upwards — downwards — downwards — at the side | any snap-on mounting 93 mm 6.2 mm 72.5 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm 0 mm |

during operation
 during storage
 during transport
 during transport
 +80 °C
 +80 °C
 relative humidity during operation
 10 ... 95 %

Approvals Certificates

General Product Approval

Declaration of Conformity



Confirmation









Test Certificates

Marine / Shipping

other

Type Test Certificates/Test Report



Confirmation

Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RS7000-1DE00

Cax online generator

 $\underline{\text{http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en\&mlfb=3RS7000-1DE00}$

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)


https://support.industry.siemens.com/cs/ww/en/ps/3RS7000-1DE00

 $Image\ database\ (product\ images,\ 2D\ dimension\ drawings,\ 3D\ models,\ device\ circuit\ diagrams,\ EPLAN\ macros,\ ...)$

http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RS7000-1DE00&lang=en

Characteristic: Derating

https://support.industry.siemens.com/cs/ww/en/ps/3RS7000-1DE00/manual

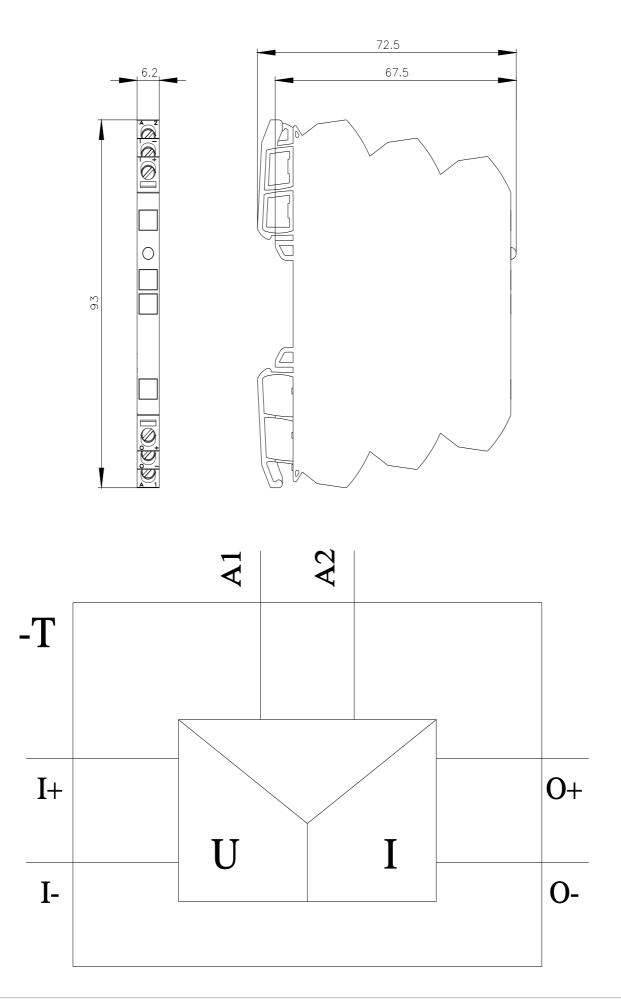

last modified: 12/23/2020 🖸

| 3RS70 Page 5 | DE | 00 |
|-----------------|--------|----|